



POWER SHIFT TRANSMISSION TROUBLE SHOOTING

1. TRACTOR DOES NOT MOVE WHEN POWER SHIFT LEVER IN ALL POSITIONS (1st, 2nd, 3rd and Reverse)

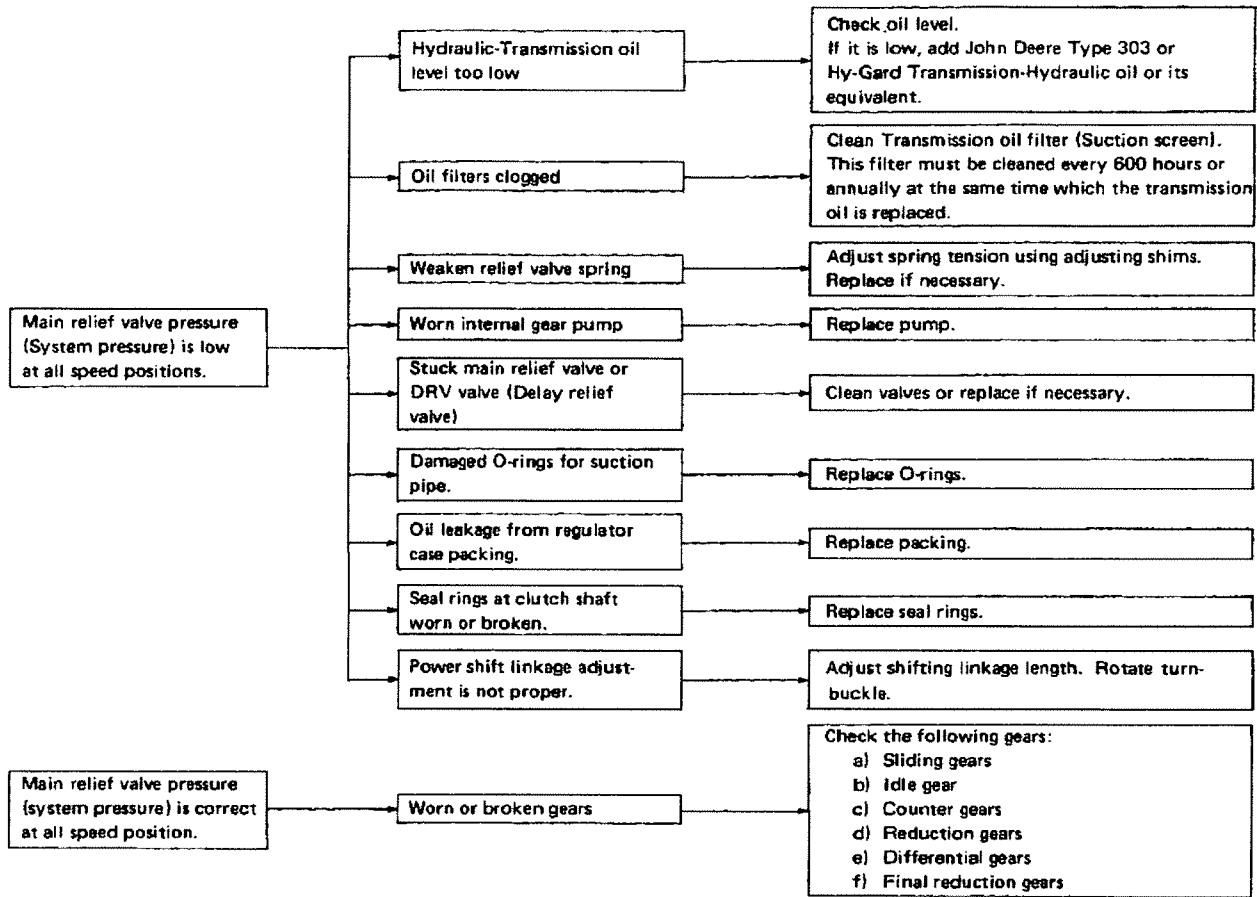


2. TRACTOR DOES NOT MOVE WHEN POWER SHIFT LEVER IN A CERTAIN SPEED POSITION

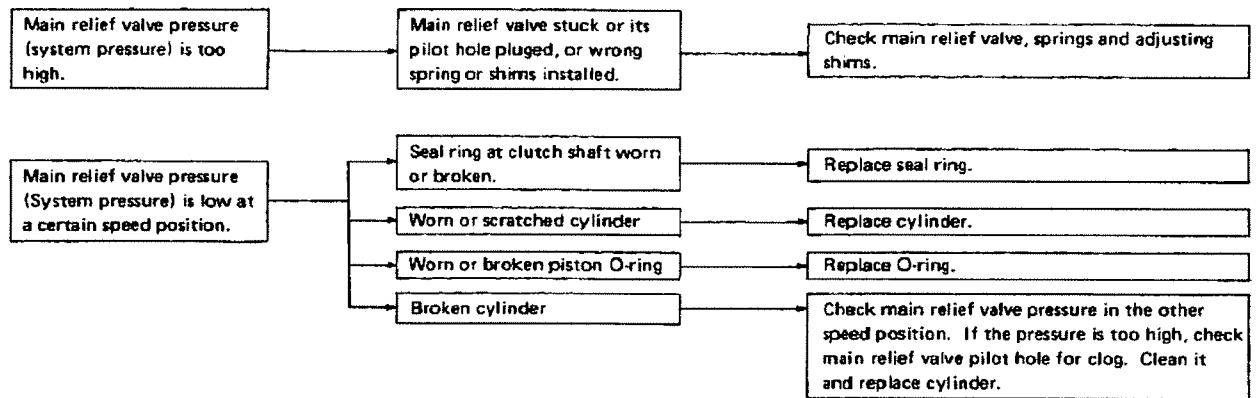


POWER SHIFT TRANSMISSION TROUBLE SHOOTING (Continued)


3. TRACTOR MOVE SLOWLY WHEN POWER SHIFT LEVER IS PLACED IN "NEUTRAL" AND RANGE SHIFT LEVER IS PLACED IN CERTAIN POSITION.

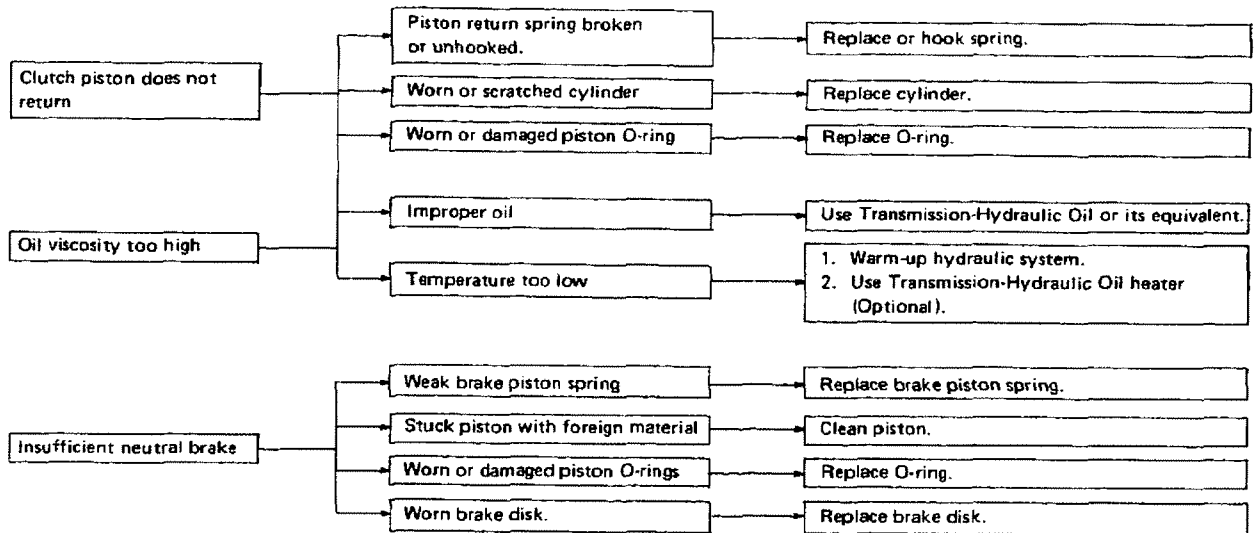

4. TRANSMISSION SHIFTS TOO FAST

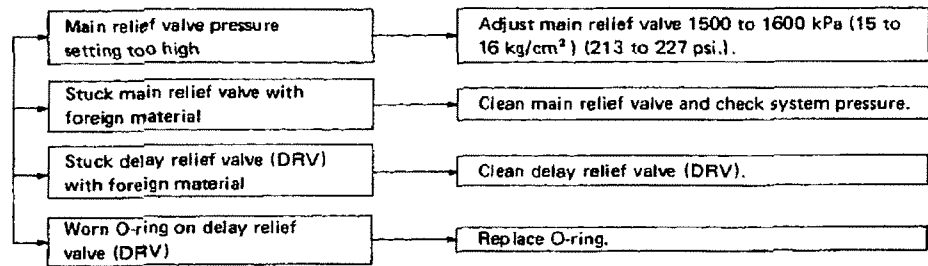

5. TRANSMISSION SHIFTS TOO SLOW

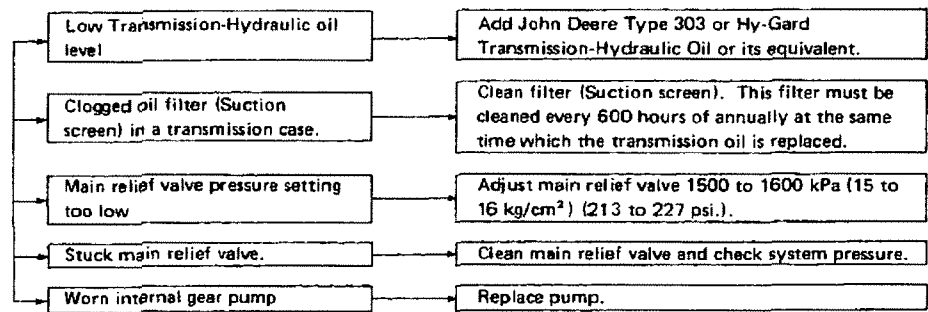

6. 2ND RELIEF VALVE PRESSURE (LUBRICATING PRESSURE) IS TOO LOW BUT MAIN RELIEF VALVE PRESSURE IS CORRECT

